

ASSEMBLY INSTRUCTIONS

MODEL NO. 904

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

PARTS

- | | |
|----------------------|------------------------------|
| (A) BACK PANEL | (F) LONG MACHINE SCREWS (4) |
| (B) LEFT SIDE PANEL | (G) SHORT MACHINE SCREWS (8) |
| (C) RIGHT SIDE PANEL | (H) METAL WASHERS (8) |
| (D) FINIALS (4) | (I) PLASTIC WASHERS (8) |
| (E) END CAPS (4) | (J) LOCK WASHERS (8) |

HARDWARE ILLUSTRATION


Tools required: Wrench (not included)



ATTENTION: SOME NUMBERED PARTS LISTED ON THE INSTRUCTION SHEET MAY NOT BE IN PARTS BAG AS THEY MAY ALREADY BE ASSEMBLED. CAREFULLY CHECK PARTS AND PACKING MATERIALS PRIOR TO ORDERING REPLACEMENTS.

IMPORTANT NOTE: Follow instructions listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

- Place all parts on a soft cloth. Insert ends of Back Panel (A) into Left and Right Side Panels (B,C). Insert Long Machine Screws (F) through holes in Left and Right Side Panels (B,C), and tighten into Back Panel (A). Insert End Caps (E) into legs of Side Panels (B,C). Tighten Finials (D) into top of Side Panels (B,C). (See ill. #1)
- To attach link spring (not included) to End Panels (B,C): Insert Short Machine Screws (G) through Lock Washers (J), Washers (H), link spring (not included), Plastic Washers (I), and tighten into End Panels (B,C). (See ill. #2)
- To preserve your lustrous painted finish, wipe with a soft damp cloth. DO NOT use cleaners or abrasives as they may damage the finish.

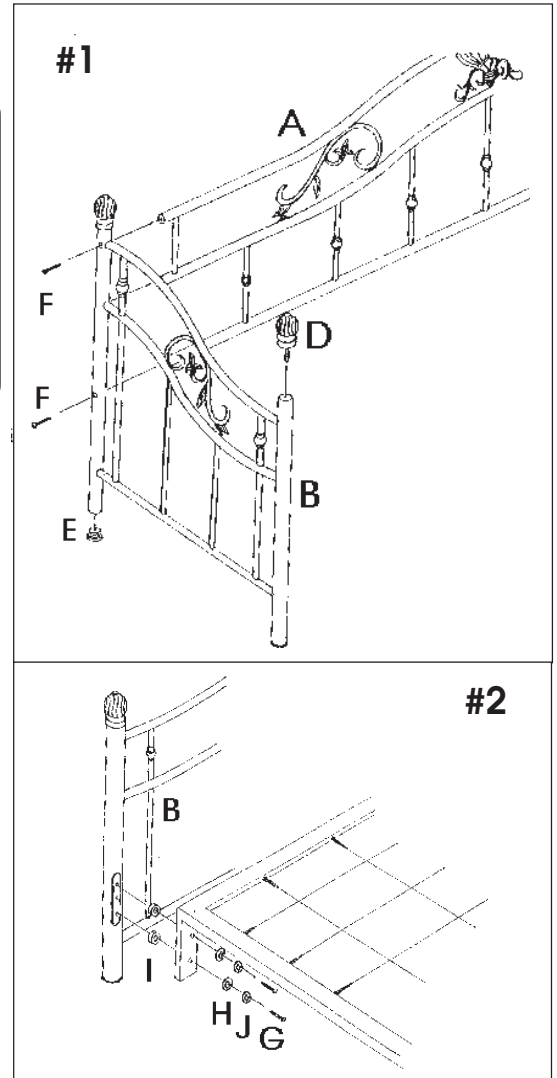

If you have a problem, we want to have the opportunity to make it right!

Should there be any missing or defective part(s),
PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

Model No.
904

(Many problems can be resolved without returning this product to the retailer)

FAX this form to (310) 841-0842

or call Customer Service at (800) 622-4456 or (310) 204-2224
Have your model number and part code letter handy.

Part Letter	Description	Quantity

Name _____
 Address _____

 Daytime Phone () _____
 Reason for Replacement _____

 Place of Purchase _____